
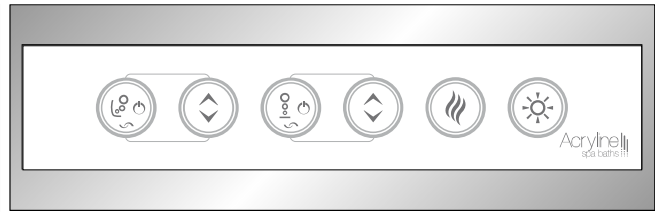


#	PRESS	FUNCTION	LED
1	1 <sup>st</sup>	THE BLOWER STARTS AT MEDIUM SPEED THE AIR HEATER STARTS AT MAXIMUM	LED BUTTON 1 ON LED BUTTON 2 ON
	2 <sup>nd</sup>	THE BLOWER STOPS THE AIR HEATER STOPS	LED BOUTON 1 OFF LED BOUTON 2 OFF
2	1 <sup>st</sup>	DECREASE THE AIR HEATER INTENSITY TO MINIMUM	BLINK
	2 <sup>nd</sup>	THE AIR HEATER STOPS	OFF
	3 <sup>rd</sup>	THE AIR HEATER STARTS AT MAXIMUM	ON
	NEXT	RETURNS TO MINIMUM, STOPS, RETURNS TO MAXIMUM, ...	-
3	HOLD	INCREASE THE BLOWER SPEED TO MAXIMUM	ON WHEN PRESS
4	HOLD	DECREASE THE BLOWER SPEED TO MINIMUM	ON WHEN PRESS
5	1 <sup>st</sup>	WAVE CYCLE, SPEED WILL VARY GRADUALLY FROM MAXIMUM TO MINIMUM.	ON
	2 <sup>nd</sup>	PULSE CYCLE, SPEED WILL GO DIRECTLY TO MINIMUM AND THAN STRAIGHT BACK TO MAXIMUM.	BLINK
	3 <sup>rd</sup>	RETURNS TO MAXIMUM SPEED	LED BUTTON 5 OFF LED BUTTON 1 ON
6	1 <sup>st</sup>	STARTS WITH WHITE	ON
	2 <sup>nd</sup>	THE COLOR CHANGES TO TURQUOISE	
	3 <sup>rd</sup>	THE COLOR CHANGES TO GREEN	
	4 <sup>th</sup>	THE COLOR CHANGES TO YELLOW	
	5 <sup>th</sup>	THE COLOR CHANGES TO ORANGE	
	6 <sup>th</sup>	THE COLOR CHANGES TO RED	
	7 <sup>th</sup>	THE COLOR CHANGES TO MAGENTA	
	8 <sup>th</sup>	THE COLOR CHANGES TO BLUE	
	9 <sup>th</sup>	THE LIGHT CHANGES TO RAINBOW MODE	
10 <sup>th</sup> OR HOLD 1 SEC. AT ANY TIME	THE LIGHT STOPS	OFF	

- Automatic shutdown after 20 minutes of operation.
- Drying cycle : An automatic one minute drying cycle will start 20 minutes after the blower stops. The blower LED will blink while waiting for the drying cycle and will stay on during the drying cycle.

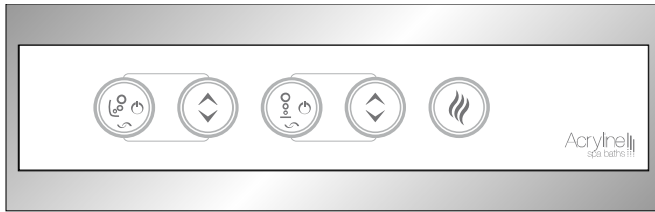

#	PRESS	FUNCTION	LED
1	1 <sup>st</sup>	THE "CHANNEL" BLOWER STARTS AT MEDIUM SPEED THE AIR HEATER STARTS AT MAXIMUM	LED BUTTON 1 ON LED BUTTON 2 ON
	2 <sup>nd</sup>	"CHANNEL" WAVE CYCLE, SPEED WILL VARY GRADUALLY FROM MAXIMUM TO MINIMUM.	BLINK SLOWLY
	3 <sup>rd</sup>	"CHANNEL" PULSE CYCLE, SPEED WILL GO DIRECTLY TO MINIMUM AND THAN STRAIGHT BACK TO MAXIMUM.	BLINK QUICKLY
	4 <sup>th</sup> OR HOLD 1 SEC. AT ANY TIME	THE "CHANNEL" BLOWER STOPS THE AIR HEATER OF THE "CHANNEL" BLOWER STOPS	LED BUTTON 1 OFF LED BUTTON 2 OFF, IF THE "CHANNEL" BLOWER NOT WORKING
2	1 <sup>st</sup>	INCREASE THE "CHANNEL" BLOWER SPEED TO MAXIMUM	ON WHEN PRESS
	2 <sup>nd</sup>	DECREASE THE "CHANNEL" BLOWER SPEED TO MINIMUM	ON WHEN PRESS
3	1 <sup>st</sup>	THE "INJECTOR" BLOWER STARTS AT MEDIUM SPEED THE AIR HEATER STARTS AT MAXIMUM	LED BUTTON 1 ON LED BUTTON 2 ON
	2 <sup>nd</sup>	"INJECTOR" WAVE CYCLE, SPEED WILL VARY GRADUALLY FROM MAXIMUM TO MINIMUM.	BLINK SLOWLY
	3 <sup>rd</sup>	"INJECTOR" PULSE CYCLE, SPEED WILL GO DIRECTLY TO MINIMUM AND THAN STRAIGHT BACK TO MAXIMUM.	BLINK QUICKLY
	4 <sup>th</sup> OR HOLD 1 SEC. AT ANY TIME	THE "INJECTOR" BLOWER STOPS THE AIR HEATER OF THE "INJECTOR" BLOWER STOPS	LED BUTTON 1 OFF LED BUTTON 2 OFF, IF THE "INJECTOR" BLOWER NOT WORKING
4	1 <sup>st</sup>	INCREASE THE "INJECTOR" BLOWER SPEED TO MAXIMUM	ON WHEN PRESS
	2 <sup>nd</sup>	DECREASE THE "INJECTOR" BLOWER SPEED TO MINIMUM	ON WHEN PRESS
5	1 <sup>st</sup>	DECREASE THE AIR HEATER(S) INTENSITY OF THE FUNCTIONAL BLOWER(S) TO MINIMUM	BLINK SLOWLY
	2 <sup>nd</sup>	THE AIR HEATER(S) OF THE FUNCTIONAL BLOWER(S) STOP(S)	OFF
	3 <sup>rd</sup>	THE AIR HEATER(S) OF THE FUNCTIONAL BLOWER(S) START(S)	ON
	NEXT	RETURN(S) TO MINIMUM, STOP(S), RETURN(S) TO MAXIMUM, ...	-
6	1 <sup>st</sup>	STARTS WITH WHITE	ON
	2 <sup>nd</sup>	THE COLOR CHANGES TO TURQUOISE	
	3 <sup>rd</sup>	THE COLOR CHANGES TO GREEN	
	4 <sup>th</sup>	THE COLOR CHANGES TO YELLOW	
	5 <sup>th</sup>	THE COLOR CHANGES TO ORANGE	
	6 <sup>th</sup>	THE COLOR CHANGES TO RED	
	7 <sup>th</sup>	THE COLOR CHANGES TO MAGENTA	
	8 <sup>th</sup>	THE COLOR CHANGES TO BLUE	
	9 <sup>th</sup>	THE LIGHT CHANGES TO RAINBOW MODE	
10 <sup>th</sup> OR HOLD 1 SEC. AT ANY TIME	THE LIGHT STOPS	OFF	

- Automatic shutdown after 20 minutes of operation.
- Drying cycle : An automatic one minute drying cycle will start 20 minutes after the blower stops. The blower LED will blink while waiting for the drying cycle and will stay on during the drying cycle.